

Fairy Berry® Instructions

Open and Close

The Fairy Berry® comes apart in the middle. Just hold the bottom half and pry open the top using fingernails.

See Figure A

Activation

1. Open the Fairy Berry® as described in the Open/Close section above.
2. Pull out the battery isolator tab to activate the light.
3. There is a tiny O-ring. Be sure to replace it if it comes off. **See Figure B**
4. Push the two halves back together again.

Replacing Batteries

1. Open the Fairy Berry® as described in the Open/Close section above.
2. Carefully remove the battery/LED module.
3. Slide the 2 #CR-1220 batteries out and replace with new batteries + side up. Note that if you are not going to use the Fairy Berries® right away, you can insert a small piece of paper or other thin material in between the batteries so the light will not come on.
4. Align the batteries with the rounded edge of the bottom of the battery holder with one battery directly on top of the other. **See Figure C.** Note that the batteries must be in the proper position or the Fairy Berry® will not fit back together properly.
5. Carefully place/press the battery/LED module back into the lower half of the Fairy Berry® aligning it with the slots on 2 sides. The batteries must be aligned properly.
6. Push the two halves back together again.

Note: Fairy Berries® battery life is generally 20+ hours of constant use with a good grade of battery. If you use them for only 8-12 hours or so, remove 1 of the batteries and store it in the top portion of the Fairy Berry®. Leave 1 battery in the battery holder. Do not store the batteries where they will touch each other.

Water Application

Fairy Berries® are water resistant. Prolonged use in water may result in some moisture or water accumulation. This may or may not ruin the electronics. If there is moisture, we suggest you remove the module and let it dry out.

Note: Not for underwater use.

Hanging Application

The bottom of the Fairy Berry® has a small recessed hole. **See Figure D.** For quick installation, we suggest using wire hangers such as the type used for Christmas ornaments or a small paper clip. Fine fishing line can be used for an almost transparent hanging device.

